Dolphin CPCI-s System Switch Module MXC962



MXC962 Users Guide

Version 1.2

Date: August 5th, 2026

Table of Contents

DISCLAIMER **4**

TERMS AND ACRONYMS **5**

INTRODUCTION **6**

MXC962 HIGH LEVEL SPECIFICATION **6**

MXC962 Detailed Specification 6

PACKAGING **6**

CPCI-s System Switch Slot 7
MXC962 Configuration 7
Thermal Shutdown *7*
PCIe Wake *7*
Airflow - Operating Environment 7
Cable Connections 7
PCI Express 4.0 Cables *7*
Active Optical PCIe Cables (AOC) *7*

INSTALLATION **8**

Step 1 - Unpack board 8
Step 2 - Configure the Board for Proper Operation 8
Step 3 - Ensure proper Airflow 8
Step 4 - Install the MXC962 8
Step 5 - Installing and Removing the Cable 8
Connecting the Cable *8*
Cable stain relief *8*
Supported cable lengths *8*
Disconnecting the Cable *9*
Step 6 - Verify Installation & LEDs 9

OPERATION **10**

Configuration and DIP Switches 10
DIP Switches *10*
DIP Switch settings for MXC962 operation *11*
Use Cases 12
Use Case A - 1 Host PC – Single CPCI-s Configuration - PCIe x16 ..... *12*
Use Case B – 1 Host PC – Single or Dual CPCI-s Configuration – PCIe x8 ..... *13*
Use Case C – 1 Host PC – Daisy chain CPCI-s Configuration – PCIe x8 ..... *14*
Use Case D - 1 Host CPCI-S – Single CPCI-s Configuration - PCIe x16 ..... *15*
EEPROM and Firmware Upgrade 16
Identifying the CPCI-s module 16

SUPPORT **17**

TECHNICAL INFORMATION **17**

Board revision history 17
PCIe Cable Port Signals 17
External PCIe x4 Cable Connector Pin-Out 17
PCIe Cable Port Mapping 19

COMPLIANCE AND REGULATORY TESTING **20**

WEEE NOTICE 20
LIMITED WARRANTY 21
WARRANTY PERIOD 21
COVERAGE 21
SERVICE PROCEDURE 21

DISCLAIMER

DOLPHIN INTERCONNECT SOLUTIONS RESERVES THE RIGHT TO MAKE CHANGES WITHOUT FURTHER NOTICE TO ANY OF ITS PRODUCTS TO IMPROVE RELIABILITY, FUNCTION, OR DESIGN.

DO NOT USE INFORMATION IN THIS GUIDE TO DESIGN YOUR OWN PCI-SIG COMPLIANT PRODUCT, ALWAYS REFERENCE THE ORIGINAL PCI-SIG SPECIFICAITON FOR DETAILS.

TO THE FULLEST EXTENT PERMITTED BY LAW, DOLPHIN WILL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS, LOST DATA, OR LOSS OF USE) ARISING OUT OF ANY USE OF DOLPHIN'S PRODUCTS, SOFTWARE OR SERVICE PROVIDED. DOLPHIN'S MAXIMUM LIABILITY WILL NOT EXCEED THE TOTAL AMOUNT PAID FOR THE PRODUCT BY THE PURCHASER.

LIFE SUPPORT POLICY

DOLPHIN INTERCONNECT SOLUTIONS' PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES.

ENVIRONMENTAL POLICY

Dolphin is minimizing the amount of printed documentation and software CDs in its shipments; please download additional documentation and software from www.dolphinics.com.

Scope

This version of the MXC962 Users Guide is valid for BMC firmware version 3.6 and newer.

Terms and Acronyms

Important terms and acronyms used in this manual

AOC	**A**ctive **O**ptical **C**able. PCIe fiber cable assembly available from Dolphin. SFF-8644 connector.
CMI	**C**able **M**anagement **I**nterface. The 2-wire management interface for communication between subsystems connected by a PCIe 4.0 cable. Details can be found in the PCI-SIG External Cabling Specification 4.0.
BMC	Board Management Controller - Microcontroller on the MXC962 used to manage and implement CMI communications.
eXpressWare	Dolphin's software stack for PCIe clustering and IO. Please visit www.dolphinics.com/software for more information.
Lane	One PCI Express Lane contains a differential pair for transmission and a differential pair for reception.
Link	A collection of one or more PCI Express Lanes providing the communication path between an Upstream and Downstream Port.
PCIe 4.0 cable	Cable compliant to the PCI-SIG External Cabling Specification 4.0. Support for CMI. SFF-8644 connector.
Port	PCIe Cable port. The MXC962 has four x4 ports, named P1, P2, P3, P4. These ports can be merged into two x8 ports, or one x16 port. The physical ports are identified by text on the PCIe brackets.
Wake	A mechanism used by a downstream device to request the reapplication of PC main power when in the L2 Link state / Power mode.

Introduction

This user's guide covers Dolphin's MXC962 Transparent cPCI-S module and comes with a license to the optional Dolphin Board Management software.

The MXC960 is fully supported by Dolphins eXpressWare software and comes with a full perpetual license for eXpressWare. Please consult the www.dolphinics.com/software for more information on eXpressWare. Please consult the MXC960 Users Guide for details on how to interconnect and operate the module.

MXC962 High Level Specification

The MXC962 is CPCI-s system switch module and supports the following configurations

- PCIe 4.0 uplink to a standard PC for CPCI-s software control
- Connectivity between two or more MXC962 based systems
- Connectivity from CPCI-s based systems to PXIe and other industry standards

MXC962 Detailed Specification

- Single System Slot 3U
- PICMG® CPCI-S.0 Specification R2.0
- PCI Express Base Specification, Rev. 4.0
- PCI Express External Cabling specification 4.0
- Microchip Switchtec PM40084 PFX PCIe 4.0 switch
    - 120 nanosecond cut-through latency port to port
    - Support for Common clocking, SRNS and SRIS
- 1G Ethernet switch
    - Broadcom BCM53158
    - 8 backplane ports 1 Gb/s Auto negotiation
    - 2 RJ45 Front Panel Ports 1 Gb/s Fixed speed, 1Gb/s Only
- PCIe Cable ports:
    - Quad SFF-8644 cable connector
    - PCIe 4.0 16.0 GT/s per lane signaling – 256 GT/s total signaling.
    - Compliant with PCIe 1.0 through PCIe 4.0 - auto detection
    - Support for PCIe4L copper cables 0.5-5 meters
    - Support for MSF4C and MSP4M fiber cables (AOC) up to 100 meters
    - Durability max total 250 mating cycles
- Backplane ports:
    - PCIe 3.0 using Airmax VS connector, total 40 lanes, up to 8 ports
    - Compliant to PCI Express 1.0 through PCIe 3.0 - auto detection
    - 8 Ethernet 1G, Auto negotiation
- Onboard M.2 Slot
    - Support for 2280 Key M M.2
    - PCIe 4.0 x4
- Support for PCIe Wake functionality
- Automatic Thermal Shutdown to avoid hardware damages (can be disabled)
- VAUX powered board management controllers for flexible configuration and cable management
- Flash recovery option. PFX Multi configuration support
- Relative Humidity: 5% - 95% (non- condensing)
- CE and FCC markings

Packaging

The MXC962 product is delivered in a retail box including the following components.

- MXC962 module
- Anti-static bag
- Getting started guide

CPCI-s System Switch Slot

The MXC962 must be placed in the CPCI-s system switch slot. The MXC962 supports backplanes running at PCIe 1.0, 2.0 and 3.0 speeds. The module will auto configure the slot speed and width to match the connected equipment. Alternative backplane configuration can be supported, please contact Dolphin for more information

MXC962 Configuration

The MXC962 cable ports can either be configured as a single x4 / x8 / x16 PCIe target for connecting to a MXH932 configured for host opeation or in daisy-chanin mode for connecting x4 / x8 to the host and a single x4 / x8 to a downstream MXC962.
The default DIP switch setting is transparent target x4 / x8 / x16 operations.

Thermal Shutdown

The MXC962 module includes over temperature overheat protection. The BMC will automatically shut down the MXC962 if a PCIe switch temperature beyond 105°C (221°F) is detected. Similarly, if an AOC is plugged in, the MXC962 module will automatically shut down if the max operating temperature announced by the connected AOC is reached. Please consult the AOC data sheet for details.

NOTE: The MXC962 link LEDs will start flashing yellow when a PCIe switch temperature of 95°C (203°F) is reached or when the AOC reports a temperature 5°C (41°F) lower than the max operating temperature specified by the AOC.

NOTE: The automatic shutdown can be disabled by setting DIP switch SW2-4. Prior to disabling the automatic shutdown, please ensure you have established proper airflow.

PCIe Wake

The MXC962 supports PCIe Wake functionality. To utilize this functionality, you need to set the MXH962 DIP-SW2-2 / Enable Wake to ON position and use PCIe 4.0 cables to connect to the Host MXH932 or MXC962. PCIe Wake must also be enabled in the Host System BIOS.

Airflow - Operating Environment

To maximize lifetime for the product and maintain the warranty, please honor the specified operating temperature, and make sure the specified air flow is present.

TIP: After installing the Dolphin eXpressWare board management software, you can use the tool dis_diag to determine the actual board temperatures.

Cable Connections

The MXC962 is designed to support both long and short PCIe copper cables as well as PCIe active optical cables (AOC).

The MXC962 cable ports are compliant to the PCIe External Cabling Specification 4.0. Four x4 cables are needed for full PCIe x16 connectivity.

PCI Express 4.0 Cables

When used with cables compliant to the PCIe External Cable standard 4.0, the MXC962 module will transmit a CMI Reset message downstream. The module can be connected to a MXC962 in Target mode or any PCIe device compliant to the new cable standard.

CMI Functionality

The MXC962 BMC firmware release 3.4 and newer supports the following CMI operations when used with PCIe 4.0 cables:

- Publishes card and CMI status information in readable memory map
- Supports sending and receiving CMI reset, wake and power status messages
- Supports receiving indicators (LED/messages).

Active Optical PCIe Cables (AOC)

Dolphin offers active optical PCIe fiber cables up to 100 meters for the MXC962 module. PCIe AOC cables do not support CWAKE and CPOWERON functionality.

Installation

Step 1 - Unpack board

The MXC962 module is shipped in an anti-static bag to prevent static electricity damage. The module should only be removed from the bag after ensuring that anti-static precautions are taken. Static electricity from your clothes or work environment can damage your MXH924 module or your CPCI-s components. Always wear a grounded anti-static wrist strap while the MXC962 is removed from the anti-static bag until it is properly installed in the CPCI-s chassis.



Unpack the MXC962 from the anti-static bag using proper anti-static procedures.

Step 2 - Configure the Board for Proper Operation

Set the DIP switch to enable the desired functionality and configuration. Please refer to the section Configuration and DIP Switches on page 10 for details.

Step 3 - Ensure proper Airflow

Please pay proper attention to ensure the selected chassis provides the minimum required airflow.

TIP: Immediately after installing the software, please use the dis_diag tool to verify the temperature. If the chip temperature reported by dis_diag exceeds 95°C, it is strongly recommended to improve the airflow.

Step 4 - Install the MXC962

Before installing the module, make sure you are properly grounded to avoid static discharges that may destroy your computer or the CPCI-s module. Ensure you are properly grounded before opening your CPCI-s chassis or the anti-static bag containing the MXC962. Please follow your CPCI-s chassis manual on how to install a CPCI-s System switch module.



Please review the list of supported and approved CPCI-s chassis.

Step 5 - Installing and Removing the Cable

Installing and removing cables should be done with the CPCI-s chassis powered off.

Connecting the Cable

Please carefully install the cable connector into the connector housing on the MXC962 module. Cable port 1 is located at the top of the face plate bracket. To install the cable, match the cable house with the connector on the MXC962. Use even pressure to insert the connector until it is secure. Adhere to ESD guidelines when installing the cables to ensure you don't damage the board. Computer cables should always use strain relief to protect the connected equipment from excessive force on the cable. This is especially important for cables between racks.

Cable stain relief

Strain-relief on the PCIe cables are important to protect the PCIe card from fatigue loading and damage. The cable should be mechanically connected to the rack or cabinet. This is especially important for long heavy cables and cables going between cabinets and racks.

Supported cable lengths

The MXC962 supports both copper and active optical PCIe cables (AOC). Maximum lengths between two MXC962 modules can be found in Table 1 below. The maximum distance may change when connecting to other PCIe products.

Cable	Dolphin SKU	Speed	Max Distance
PCIe 4.0 copper cables	PCIe4L-xM	PCIe 4.0	5 meters
PCIe Active Optical cables (AOC)	MSF4C-xM	PCIe 4.0	100 meters
PCIe Active Optical cables (AOC) Pigtail + Patch cable	MSP4M-1M + MTFCFF-xM	PCIe 4.0	102 meters

Table 1: Cable Specifications

Disconnecting the Cable

Please carefully pull the release tab to release the cable from the locking latches and gently pull the cable out of the connector guides.

Step 6 - Verify Installation & LEDs

The MXC962 comes with 4 LEDs which show the corresponding cable port status according to Table 2: LED below.
The LEDs are visible through cut-outs in the front panel below each port.

LED color	Function
Off	No cable installed, or CPCI-s not powered
Yellow	Cable installed, no link
Yellow blinking	Temperature overheat warning, please immediately improve cooling to avoid thermal damage or system shutdown.
Green blinking	Cable installed, link operational at lower than PCIe 4.0 speed
Green	Cable installed, link operational at PCIe 4.0 speed
Red blink	Link Reset

Table 2: LED behavior

Operation

Configuration and DIP Switches

The MXC962 has one bank of 8 DIP switches. The default factory setting for the MXC962 is Transparent Target mode, single (up to x16) link connection.

The MXC962 has DIP switches for setting special modes or operations, the meaning of each DIP switch depends on the loaded firmware. Please carefully read this section before modifying any DIP switch settings. Please pay close attention to ON and OFF positions written on the DIP switch.

DIP Switches



Figure 1: DIP Switch shows the DIP switch for the MXC962. It is used to configure the CPCI-s module. Please leave all undocumented DIP switches in the default position. **Error! Reference source not found.**

DIP no.	Description	ON	OFF	Default
1-5	Configuration selector, details below			OFF
6	Thermal Shutdown Disable	Will disable thermal shutdown	The card will shut down on thermal overload.	OFF
7	Holds the management processors in reset. Do NOT ACTIVATE without instructions from Dolphin.	Board management is held in reset	Normal operation	OFF
8	Do NOT ACTIVATE without instructions from Dolphin.	Do not activate without instructions from Dolphin	Normal operation	OFF

shows all the various DIP switch settings for the MXC962.

Note: DIP switch configuration options may be changed in the future versions. Please always consult the latest user guide for details. The table above is valid for BMC version 3.5.

Figure 1: DIP Switch

DIP no.	Description	ON	OFF	Default
1-5	Configuration selector, details below			OFF
6	Thermal Shutdown Disable	Will disable thermal shutdown	The card will shut down on thermal overload.	OFF
7	Holds the management processors in reset. Do NOT ACTIVATE without instructions from Dolphin.	Board management is held in reset	Normal operation	OFF
8	Do NOT ACTIVATE without instructions from Dolphin.	Do not activate without instructions from Dolphin	Normal operation	OFF

Table 3: DIP SW1 settings

DIP switch Settings

The following DIP Switch settings should be considered when configuring the **MXC962**:

DIP Switch settings for MXC962 operation

The following DIP-1 Switch settings should be considered when configuring the **MXC962**:

Config	Use Case	Configuration MXC962	DIP SW1	DIP switch view
0	A+B+D	• Transparent Target • One x16 upstream port (P1+P2+P3+P4) • x8+x8+x4+x4+x4+x4+x4+x4 Backplane • x4 NVMe	**(all off)**	
4	D	• Transparent Host • x16 Upstream on system slot • x16 Downstream on cable	**3: ON**	
5	C+D	• Transparent Target / Daisy chain • One x8 upstream port (P1+P2) • One x8 downstream port (P3+P4) • x8+x8+x4+x4+x4+x4+x4+x4 Backplane • x4 NVMe	**1: ON** **3: ON**	

Use Cases

The MXC962 module may be used to connect the CPCI-s chassis to a PC utilizing a MXH932 or another CPCI-S chassis utilizing another MXC962. A PC can connect to several MXC962 using a single or multiple MXH932. The MXS924 PCIe 4.0 switch can also be used to create larger systems. The supported use cases and the DIP switch settings are summarized in section Configuration and DIP Switches on page 10. DIP-Switch settings for the MXH932 card can be found in the MXH932 Users Guide available from www.dolphinics.com/MX.

Use Case A - 1 Host PC – Single CPCI-s Configuration - PCIe x16

The Host system has an MXH932 adapter configured for Host operation and a direct x4, x8 or x16 link to an MXC962. If you are not using all four ports, please always start connecting the lower port numbers. MXC962 is placed in the first slot. Slot 2-3 is x8, Slot 4-8 is x4. The MXC962 will provide the clock and reset to slot 2-8.

The MXC962 DIP-1 Switch should be set to Config 0: Single Target config.

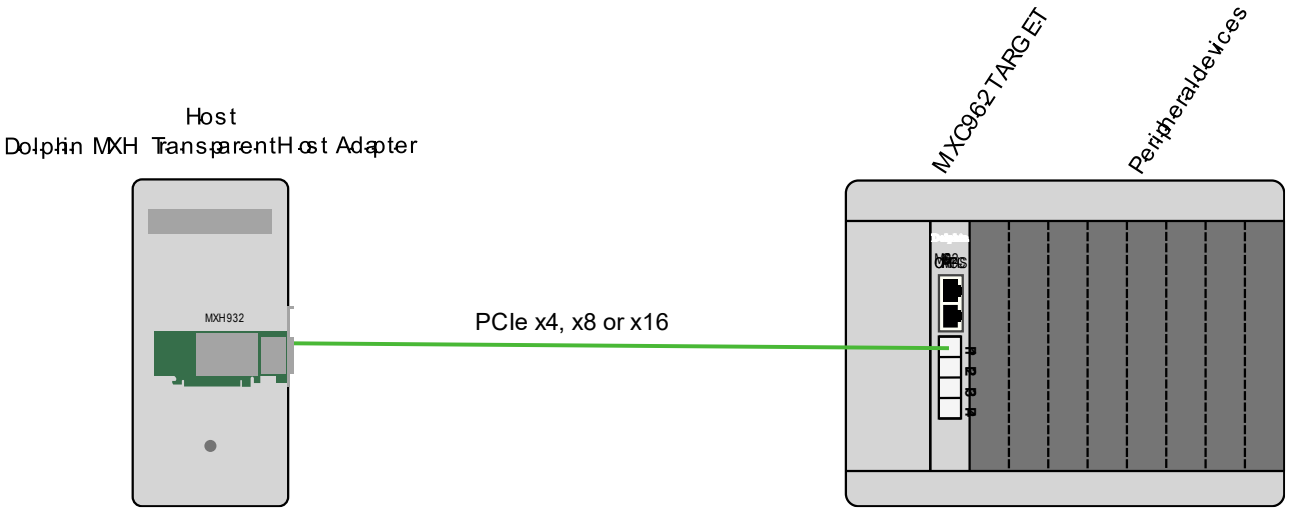

Figure 2: Use Case A

MXH932 Host card ports	MXC962 ports
P1	P1
P2	P2
P3	P3
P4	P4

Table 3: Required x16 cabling

Always connect a cable from Port #x to Port #x
A failure connecting any of the cables will cause the link to re-train to x8 or x4.

Use Case B – 1 Host PC – Single or Dual CPCI-s Configuration – PCIe x8

The host has an MXH932 adapter configured for Transparent Host operation and a direct x8 link is used to connect one or two CPCI-s systems utilizing MXC962s. Please note, always use MXC962 port P1 and P2 on both systems. If you are only connecting a single x4 cable, please only use port P1 on both systems.

The MXC962 DIP-1 Switch should be Config 0 (ALL DIPs OFF): Single target or Config 5 (DIP #1 & #3 ON): Transparent Target / Daisy chain

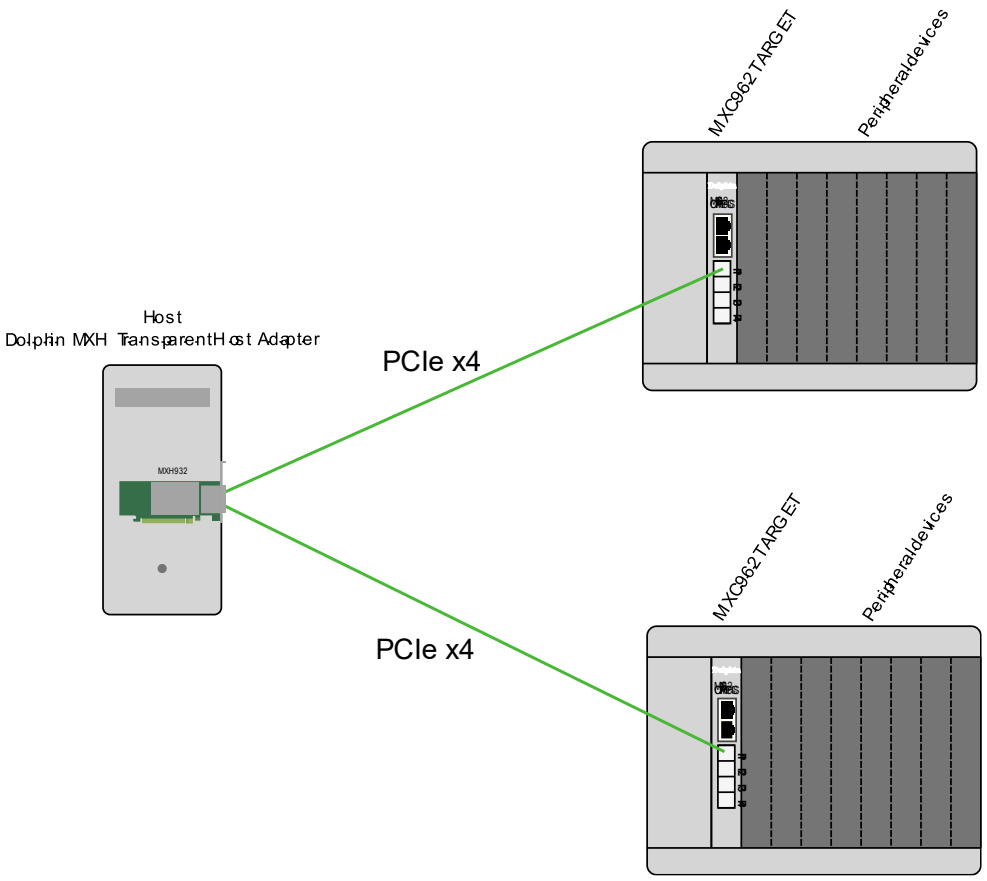

MXH932 Host card ports	MXC962 Target 1 ports	MXC962 Target 2 ports
P1	P1	
P2	P2	
P3		P1
P4		P2

Table 4: Required x8 cabling

Use Case C – 1 Host PC – Daisy chain CPCI-s Configuration – PCIe x8

The host has an MXH932 adapter configured for Transparent Host operation. Two or more MXC962 switches are connected in a daisy chain. Port P1 and P2 are upstream. Port P3 and P4 are downstream.

The MXC962 DIP-1 Switch should be Config 5 (DIP #1 & #3 ON): Transparent Target / Daisy chain

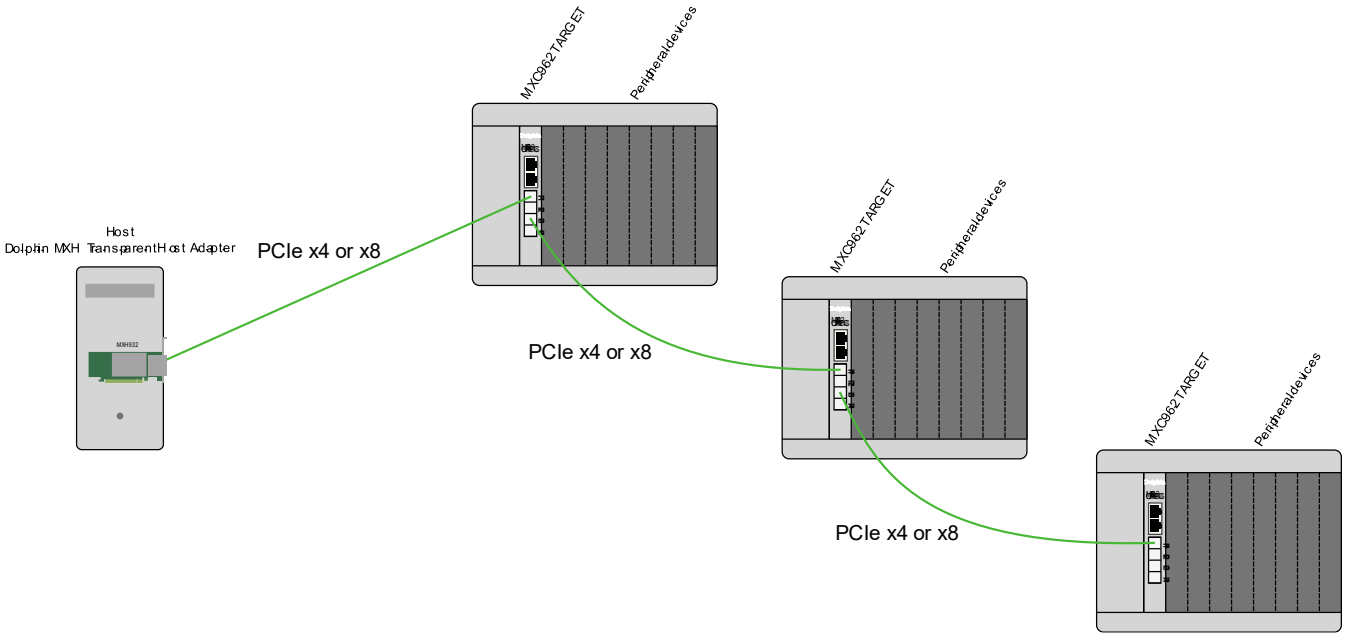

Figure 3: Use Case C

MXH932 Host card ports	MXC962 Target card 1 port	MXH924 Target card 2 ports	MXH924 Target card 2 ports
P1	P1	P3	P1
P2	P2	P4	P2
	P3	P1	
	P4	P2	

Table 5: Required x4 cabling

Use Case D - 1 Host CPCI-S – Single CPCI-s Configuration - PCIe x16

The Host CPCI-S system has an MXC962 configured for Host operation and a direct x4, x8 or x16 link to an MXC962 configured as a target. If you are not using all four ports, please always start connecting the lower port numbers. In the Host system, the MXC962 is placed in a peripheral slot, in the target system, the MXC962 is configured as a target.

The host system should use Config 4 (DIP #3 ON), while the target system should use Config 0 (ALL DIPs OFF)

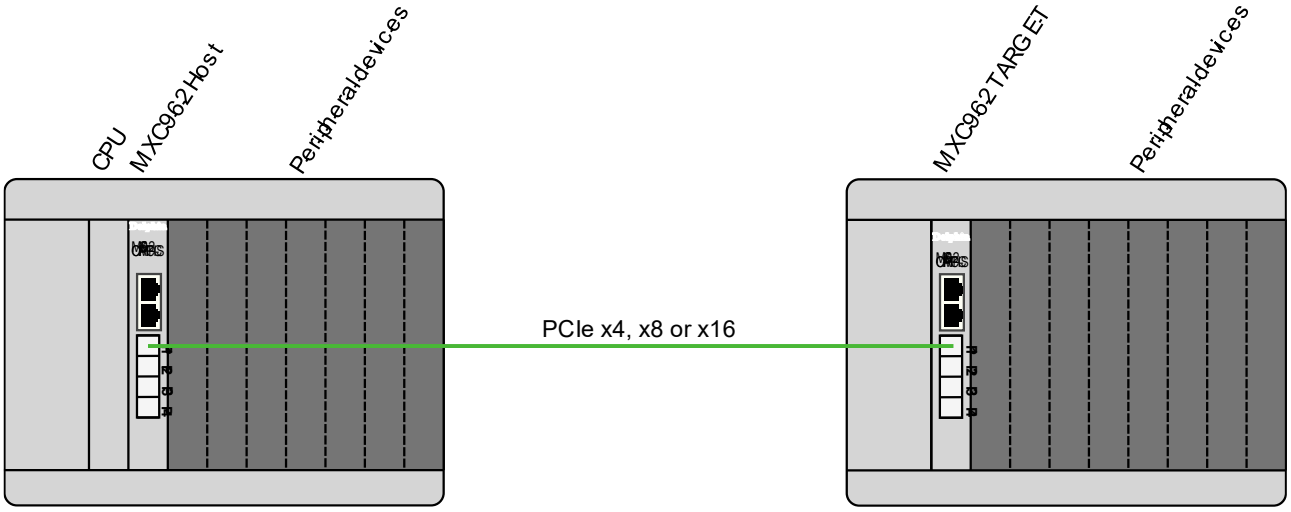

MXC962 Host card ports	MXC962 Target ports
P1	P1
P2	P2
P3	P3
P4	P4

Table 6: Required x16 cabling

EEPROM and Firmware Upgrade

The MXC962 design uses a Board Management Controller (BMC) to implement the PCIe CMI protocol, reset and other maintenance functions. Dolphin may from time to time publish updated firmware for the BMC, PCIe switch or EEPROM data for the card.

WARNING: Please note that standard Microsemi tools (ChipLink) cannot be used to upgrade the firmware as this will violate the warranty. Please contact Dolphin for instructions on how to upgrade the MXC962 firmware.

Note: Please consult the MXC962 Firmware Release Note for details on supported configurations.

Identifying the CPCI-s module

The module has a label-sticker with the serial number in the format 'MXC962-YY-ZZZZZZ', where YY denotes the revision (e.g. BB) and ZZZZZZ denotes the serialized production number (e.g. 012345) – this whole string makes up the serial number of the module (i.e. MXC962-CC-012345).

You can also get this information using lspci in Linux:

First, identify the devices for the Dolphin Host card:

```
# lspci | grep "Device 4084"

01:00.0 PCI bridge: PMC-Sierra Inc. Device 4084
01:00.1 Bridge: PMC-Sierra Inc. Device 4084
02:00.0 PCI bridge: PMC-Sierra Inc. Device 4084
```

Then run lspci and identify the module. It will show up as something like

```
# lspci -s 1:0.0 -v
01:00.0 PCI bridge: PMC-Sierra Inc. Device 4084 (prog-if 00 [Normal decode])
        Flags: bus master, fast devsel, latency 0, IRQ 122
        Bus: primary=01, secondary=02, subordinate=03, sec-latency=0
        I/O behind bridge: 00002000-00002fff
        Prefetchable memory behind bridge: 00000000c8000000-00000000c81fffff
        Capabilities: [40] Express Upstream Port, MSI 00
        Capabilities: [7c] MSI: Enable+ Count=1/8 Maskable- 64bit+
        Capabilities: [8c] Power Management version 3
        Capabilities: [94] Subsystem: Dolphin Interconnect Solutions AS Device 0962
        Capabilities: [100] Advanced Error Reporting
        Capabilities: [148] Power Budgeting <?>
        Capabilities: [158] #12
        Capabilities: [188] #19
        Capabilities: [1b4] Device Serial Number 00-00-43-43-00-00-00-24
        Capabilities: [1c0] Latency Tolerance Reporting
        Capabilities: [1c8] Access Control Services
        Capabilities: [1f0] #25
        Capabilities: [1fc] #26
        Capabilities: [23c] #27
        Capabilities: [7f8] Vendor Specific Information: ID=ffff Rev=1 Len=808 <?>
        Kernel driver in use: pcieport
        Kernel modules: shpchp
```

Second, do

```
# lspci -s 1:0.0 -v | grep -E "Subsystem|Serial"
        Capabilities: [a4] Subsystem: Dolphin Interconnect Solutions AS Device 0962
        Capabilities: [100] Device Serial Number 00-00-42-42-00-00-00-ff
```

This shows the module as revision 0x4242 (hexadecimal values of the 'BB' letters in the ASCII table), with the production number 0x000000ff (00000255 in decimal).

Support

More information about the product, support and software download can be found at www.dolphinics.com/mx.
For general support questions, please contact Dolphin via the Jira Service Management portal: www.dolphinics.com/csp.

Technical Information

Board revision history

The following table gives a general overview of the hardware revision history.

MXC962 revision	Capabilities
MXC962-CC	• Initial production version

PCIe Cable Port Signals

The external PCI Express SFF-8644 cable connector supports the following signals:

- PETpN/PETnN: PCI Express Transmitter pairs, labeled where N is the Lane number (starting with 0); "p" is the true signal while "n" is the complement signal.
- PERpN/PERnN: PCI Express Receiver pairs, labeled where N is the Lane number (starting with 0); "p" is the true signal while "n" is the complement signal.
- PWR: Power to support AOC and signal conditioning components within the cable assembly.
- MGTPWR: Power supplied to the connector for cable management components that are needed while the link is not active. This needs to be active if the subsystem has power.
- CBLPRSNT#: Cable present detect, an active-low signal pulled-down by the cable when it is inserted into the MXC962 connector.
- CADDR: Signal used to configure the upstream cable management device address.
- CINT#: Signal asserted by the cable assembly to indicate a need for service via the CMI controller.
- CMISDA: Management interface data line. Used for both initial link setup and sideband messages when used with CMI compliant cables.
- CMISCL: Management interface clock line. Used for both initial link setup and sideband messages when used with CMI compliant cables.

External PCIe x4 Cable Connector Pin-Out

					Column				
Row	9	8	7	6	5	4	3	2	1
D	GND	PETn2	PETp2	GND	PETn1	PETp1	GND	MGTPWR	PWR
C	GND	PETn3	PETp3	GND	PETn0	PETp0	GND	CMISDA	CMISCL
B	GND	PERn2	PERp2	GND	PERn1	PERp1	GND	CBLPRSNT#	PWR
A	GND	PERn3	PERp3	GND	PERn0	PERp0	GND	CINT#	CADDR

Table 7; External PCIe x4 cable Pin-Out

PCIe Cable Port Mapping

The MXC962 module has a quad SFF-8644 connector. The table below shows the signal / port map.

Cable Port	x16	Dual x8	Quad x4	PCIe 3.0 Cable Pin
1	L0 L1 L2 L3	L0 L1 L2 L3	L0 L1 L2 L3	TX0/RX0 TX1/RX1 TX2/RX2 TX3/RX3
2	L4 L5 L6 L7	L4 L5 L6 L7	L0 L1 L2 L3	TX0/RX0 TX1/RX1 TX2/RX2 TX3/RX3
3	L8 L9 L10 L11	L0 L1 L2 L3	L0 L1 L2 L3	TX0/RX0 TX1/RX1 TX2/RX2 TX3/RX3
4	L12 L13 L14 L15	L4 L5 L6 L7	L0 L1 L2 L3	TX0/RX0 TX1/RX1 TX2/RX2 TX3/RX3
Lx – PCIe lane X, Cable port is ref PCIe bracket marking				

Table 8 : PCIe Cable Port Mapping

Compliance and Regulatory Testing

EMC Compliance

The Dolphin CPCI-s MXC962 system switch has been tested to comply with the following standards:

- EN 55032:2015 + A11:2020
- EN 55035:2017 + A11:2020
- EN 61000-3-2:2014
- EN 61000-3-3:2013
- CISPR 35:2016
- KS C 9835:201
- CISPR 11:2015 (6th Edition) + A1:2016 + A2:2019
- IEC 61326-1:2021
- 47 CFR Part 15, Subpart B last amended 2025-09-17 excluding clause 15.105, in conjunction with ANSI C63.4:2014
- ICES-003, issue 7 excluding clause 4.2 in conjunction with ICES-Gen, Issue 2 and ANSI C63.4-2014 amended as per ANSI C63.4a-2017

This does not ensure that it will comply with these standards in any random CPCI-s chassis. It is the responsibility of the integrator to ensure that their products are compliant with all regulations where their product will be used.

FCC Class A

This equipment has been tested to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

RoHS Compliance

The Dolphin MXC962 is RoHS compliant. A Compliance certificate issued by the manufacturer is available upon request.

WEEE Notice

The CPCI-s module is labelled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to products to indicate that the product is not to be thrown away but returned to your local approved WEEE waste collector.

Limited Warranty

Dolphin Interconnect Solutions warrants this product to be free from manufacturing defects under the following terms:

Warranty Period

The warranty applies for one (1) year from the date of purchase. Extended warranty is available.

Coverage

To the extent permitted by applicable law, this warranty does not apply to:

- Damage caused by operator error or non-compliance with instructions available for the product.
- Use or attempt to use or program firmware not approved by Dolphin.
- Damage due to accidents, abuse, misuse, improper handling or installation, moisture, corrosive environments, high voltage surges, shipping, or abnormal working conditions.
- Damage caused by acts of nature, e.g. floods, storms, fire, or earthquakes.
- Damage caused by any power source out of range or not provided with the product.
- Normal wear and tear.
- Attempts to repair, modify, open, or upgrade the product by personnel or agents not authorized by Dolphin.
- Products for which the serial number label has been tampered with or removed.
- Damage to the product caused by products not supplied by Dolphin.

Service Procedure

In the event that the product proves defective during the Warranty Period, you should contact the seller that supplied you with the product, or if you purchased it directly from Dolphin, visit www.dolphinics.com/csp to obtain a valid RMA number and instructions. Products returned to Dolphin without a proper RMA number will not be serviced under this warranty.